

INSTRUCTIONS FOR USE



 
INSTRUCTIONS FOR USE

IMPORTANT: Please read these instructions carefully before using this device and keep them for future reference!

1. WHAT'S IN THE BOX

Your package contains:

- the 'universal magic docking station'
- a BL5C 800mAh, 3.7V rechargeable battery
- a 3.5mm 2-in-1 USB and audio cable

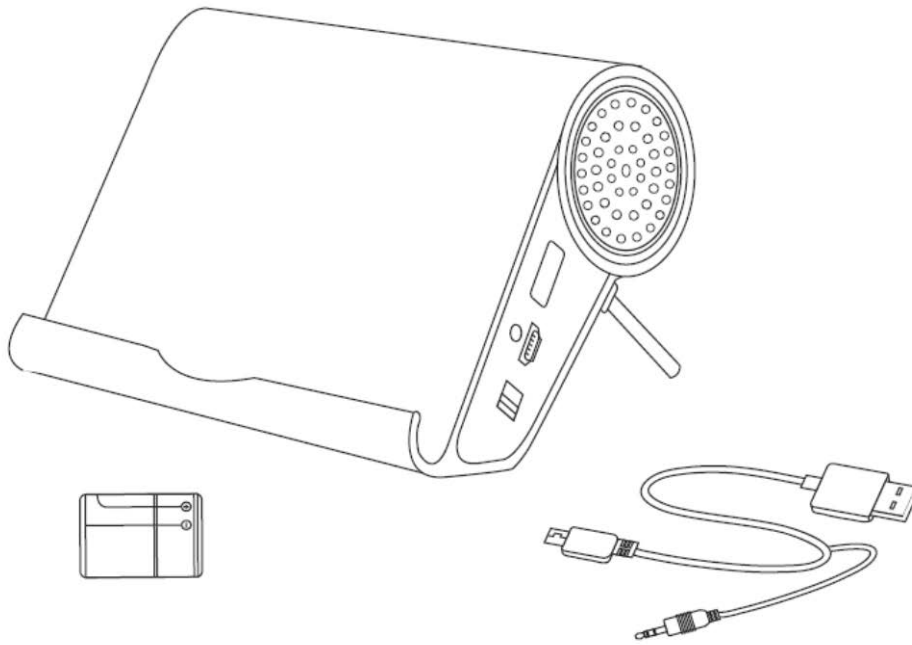

2. PRODUCT FEATURES

Technical specifications:

Speaker power: 2 x 2W

Power indicator

Retractable feet (see image no 2 below)

3. BEFORE USING FOR THE FIRST TIME

Power

The 'universal magic docking station' comes equipped with a 800 Mah BL 5C rechargeable lithium battery.

The battery life depends on the sound volume used (60 to 100 mins of extended listening).

 
Installing the rechargeable battery

Insert the battery into the battery compartment which can be found on the rear of the product. Make sure you respect the direction of the polarities indicated on the battery. The compartment terminals must be in contact with the metal parts of the battery.

Charge your device for at least two hours for optimum listening time.

You can charge your device directly from a computer using the USB cable supplied.

Disconnect the USB cable once the device is charged or use your device by connecting it to your computer to prolong the battery life.

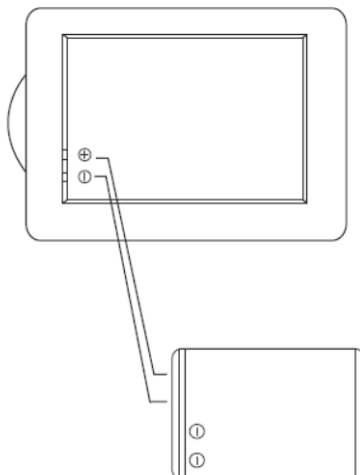

Safety instructions

Handle the battery with care

This product contains a Lithium-ion polymer battery. There is a risk of fire and burns if the battery is not handled correctly or if it is placed in, on or near a heat source (microwave oven, oven, radiator, cooking surface, fire). Do not attempt to open or repair the battery. Do not disassemble, crush or pierce the battery and do not short-circuit the external contacts, do not dispose of in fire or water, do not expose the battery to temperatures above 40°C. Never use a damaged battery or charger. Make sure the battery is replaced with one with identical specifications. Recycle or dispose of old batteries following local regulations or the instructions provided with the product.



OTHER IMPORTANT GENERAL PRECAUTIONS

Repair precaution

Except for the cases detailed in the user or service documentation, never repair the product yourself. Any repairs to the internal components of the device must be carried out by the manufacturer, its after-sales service department or a similarly qualified person in order to avoid any risks.

Damage which must be repaired

Unplug the product from the electrical socket and entrust the repair to a technician or authorised repairer in any of the following circumstances:

A liquid has been spilt on the product or an object has fallen onto it.

The product has been exposed to rain and water.

The product has fallen or been damaged.

There are visible signs of overheating.

The product does not work properly when you follow the instructions.

Avoid hot places

The product must be kept away from heat sources, such as radiators, heating vents, ovens, or any other products (including amplifiers) which give off heat.

Avoid damp areas

Never use the product in a damp place.

Do not push objects into the product

Never push any object whatsoever into the outlets or other openings in the product. The gaps and openings provide ventilation. These openings must not be blocked or covered.

• Fitting the accessories

 
Do not use the product on an unstable table, trolley, mount, stand or base. The product must be assembled in accordance with the instructions set forth in this manual, using the assembly accessories provided in the box.

• Cleaning

Unplug the device from the socket before cleaning. Do not use liquid cleaners or aerosols. Use a damp cloth for cleaning, but NEVER use water to clean the scree006E.

. **Keep a close eye on your children to ensure that they do not play with the device**


Description of the functions:

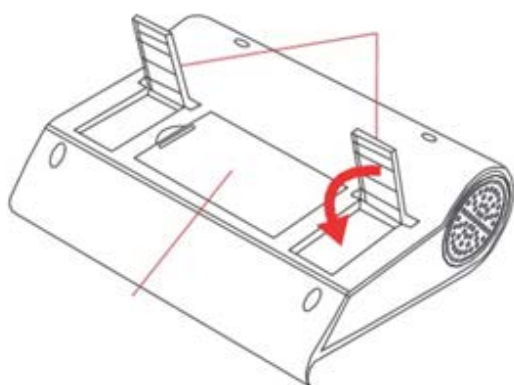

1



 2

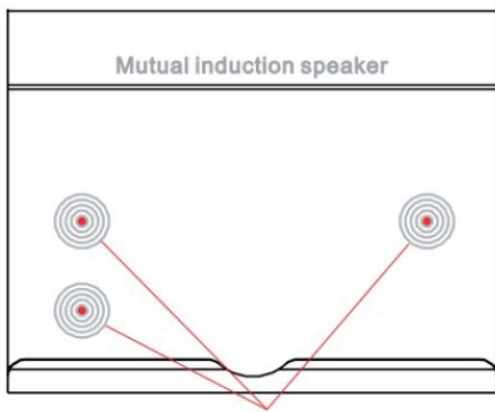

3

1. On the rear of the product, you will find the retractable feet and the battery compartment. Refer to the battery section above for installation instructions.
2. On the side of the docking station, you will find the On/Off switch (C), a power indicator (D), a USB microphone jack (B) to recharge the lithium battery and a USB port (A) to recharge your USB devices.
3. This diagram shows the locations of the acoustic sensors on the docking station.

4. USING THE DEVICE

4.1 Listening to music wirelessly

- Move the on/off switch to the ON position to turn on your device.
- Set your telephone, tablet or MP3 player on the docking station so that your device's microphone is near the sensors. Gently move your device from side to side to check that you have set it on the docking station correctly in order to ensure the best possible performance.
- To switch off the device, move the ON/OFF switch to the OFF position.

4.2 Listening to music with an audio cable

- Move the on/off switch (C) to the ON position to turn on your device.
- Plug the 2-in-1 USB cable into the mini USB port on the docking station (B), connect your device to the cable using the 3.5mm audio outlet.
- To switch off the device, move the ON/OFF switch to the OFF position.

DISPOSING OF ELECTRICAL DEVICES AT THE END OF THEIR LIFE CYCLE

Application in European Union and other European countries with selective waste collection.



This symbol, affixed to the product or its packaging, indicates that this product must not be disposed of with household waste. It must be taken to a waste sorting centre suitable for recycling electrical and electronic equipment.

By ensuring that this product is disposed of properly, you can help to prevent the potential negative consequences for the environment and human health. Recycling helps to save natural resources. For any extra information concerning the recycling of this product, contact your local authorities, your waste reception centre or distributor.