

## INSTRUCTIONS FOR USE



s m e e z u

---

**INSTRUCTIONS FOR USE**  
**SMARTWATCH**

**N.B.: Please read these instructions carefully before using the device and keep them for future reference!**

## **1. CONTENTS**

Your package contains:

- 1 Smeezu Smartwatch
- 1 USB cable to connect the device to a computer and recharge the battery
- Stereo earphones
- 1 instruction manual

## **2. TECHNICAL SPECIFICATIONS**

4GB internal memory, 3.7V Li-ion battery, 400mAh. Wireless technology version 2.1.

Screen: 1.5 inch capacitive touch panel.

## **3. IMPORTANT SAFETY PRECAUTIONS**

Follow these instructions to preserve the operational lifespan of your Smartwatch:

- It is strongly recommended that you allow the battery to charge fully before using the device for the first time.
- Do not recharge unattended for longer than 3 hours.
- Do not hang the device by its earphones or cable.
- Never force any cable connectors into the ports of your Digital Media Player or computer. Always make sure that your cable connectors are identical in shape and size before attempting to connect.
- When disconnecting your Smartwatch from a computer, use the Safely Remove Device function on your computer. Never disconnect your Smartwatch while transmitting data.
- Safe use for listening to music depends on exposure time and volume levels.
- Do not immerse in water.
- Do not disassemble or incinerate the battery and do not expose it to temperature above 40°C.
- Never use liquid or aerosol cleaners. Use a damp cloth for cleaning. Never use water to clean the screen.
- Do not use this Smartwatch in extreme temperatures. Do not use in hot, cold, dry, or damp areas. Keep away from water, fire, and radiation.
- Do not disassemble your Smartwatch
- Do not allow young children to use your Smartwatch unsupervised.
- Do not install other software onto your Smartwatch.
- Never use an electrical device when the plug or power cord is damaged, or if it has suffered from a malfunction, or has been damaged in any way.
- If the power cord is damaged, it must be replaced by the manufacturer, certified after sales service or by a similar qualified person to avoid danger. Do not disassemble, attempt to repair or modify the product yourself.

## PREVENTING HEARING LOSS


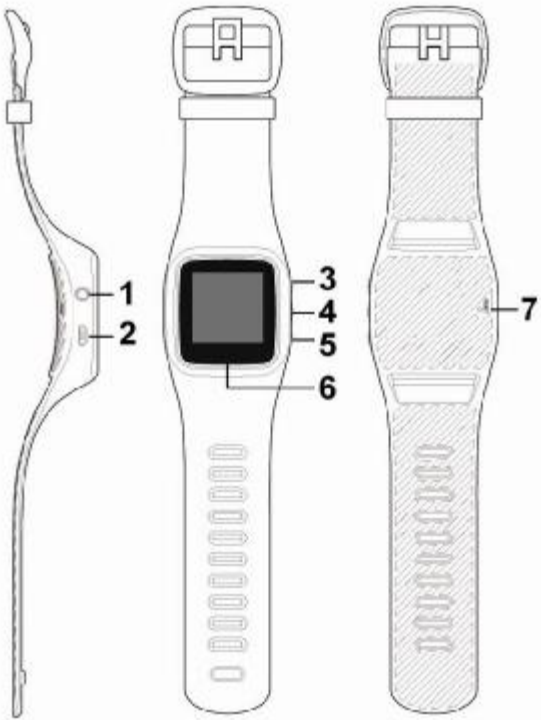






**CAUTION:** Sustained use of personal stereo earphones at full power can damage the user's ears.

**NOTE:** The headphones or earphones for this device comply with European Union sound pressure levels stipulated in the EN 50332-1:2000 standard.








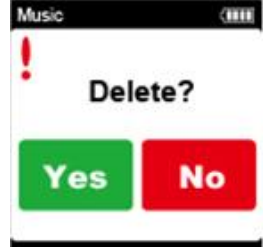
## 4. PRODUCT DESCRIPTION

- Connected watch design for sports players
- 1.5-inch capacitive TFT touch screen display
- 128x128 pixel display resolution
- Wireless technology v2.1, can link with any wireless devices of the same type up to a distance of 10 meters, transmit music from the watch to BT headphones and/or speakers
- Integrated vibration motor, to be alerted of incoming calls by vibration
- Measures your steps, calculates distance and calories
- Walk & Run function
- Stopwatch function
- Four colors of watch face available
- Plays MP3, WAV, APE and FLAC music format files
- Plays 128x128 AVI video format files after conversion through provided software
- Picture browsing of JPEG and BMP format files
- Built-in FM radio
- Integrated 400mAh Li-ion battery
- Multi-language screen display
- 4GB internal memory to support your music and video files


|   |   |               |  |
|---|---|---------------|--|
| 1 |  | Earphone jack |  |
| 2 |  | USB port      |  |
| 3 |  | ON/OFF button |  |
| 4 |  | Volume +      |  |
| 5 |  | Volume -      |  |
| 6 |  | Screen        |  |
| 7 |  | Reset button  |  |

## 5. USE

Press the ON/OFF button to turn on the Smartwatch. The screen will display the time. Slide your finger from left to right or right to left to display the time showing watch hands or in digital format.


|   |   |  |
|---|---|--|
| <p>1. Go to Main menu<br/>Swipe up or tap the screen</p>  <p>①</p> | <p>2. Return to Watch mode<br/>Swipe down</p>  <p>②</p>                  | <p>3. Choose a menu<br/>Swipe left to right or right to left</p>  <p>③</p>                                |
| <p>4. Enter a menu<br/>Tap the menu icon</p>  <p>④</p>            | <p>5. Return to higher menu level<br/>Swipe left to right</p>  <p>⑤</p> | <p>6. Long press on the video or music file and confirm "YES" if you want to erase from the memory</p>  |

### 5.1 Main menus

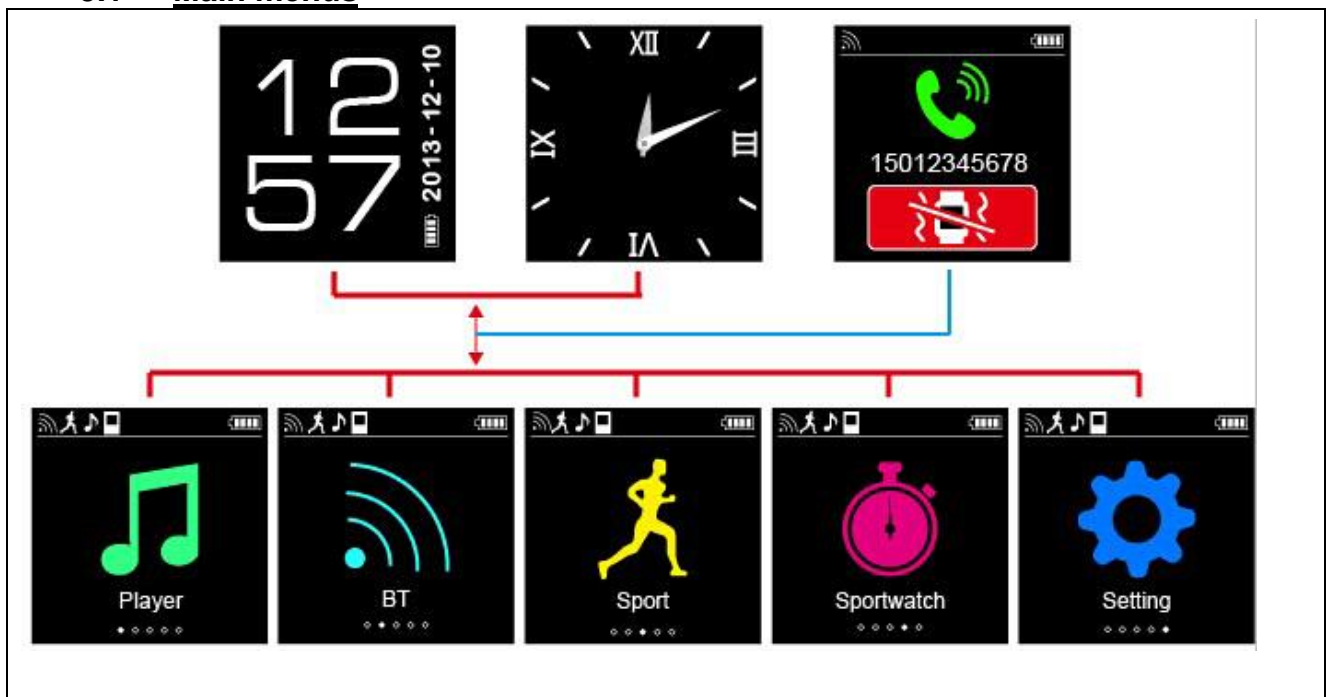


|  |                             |           |                      |                |  |
|--|-----------------------------|-----------|----------------------|----------------|--|
| Music / Radio / Photo / Video / Explorer | Wireless / technology / 2.1 | Pedometer | Stopwatch            | Go to Settings |  |
| I Small icons at left top:               |                             |           |                      |                |  |
| BT connecting to headphones/speaker      |                             |           | Sport                |                |  |
| Now playing                              |                             |           | Connected smartphone |                |  |

There are four colors of watch face available. Go to Settings → Style and select the color of your choice

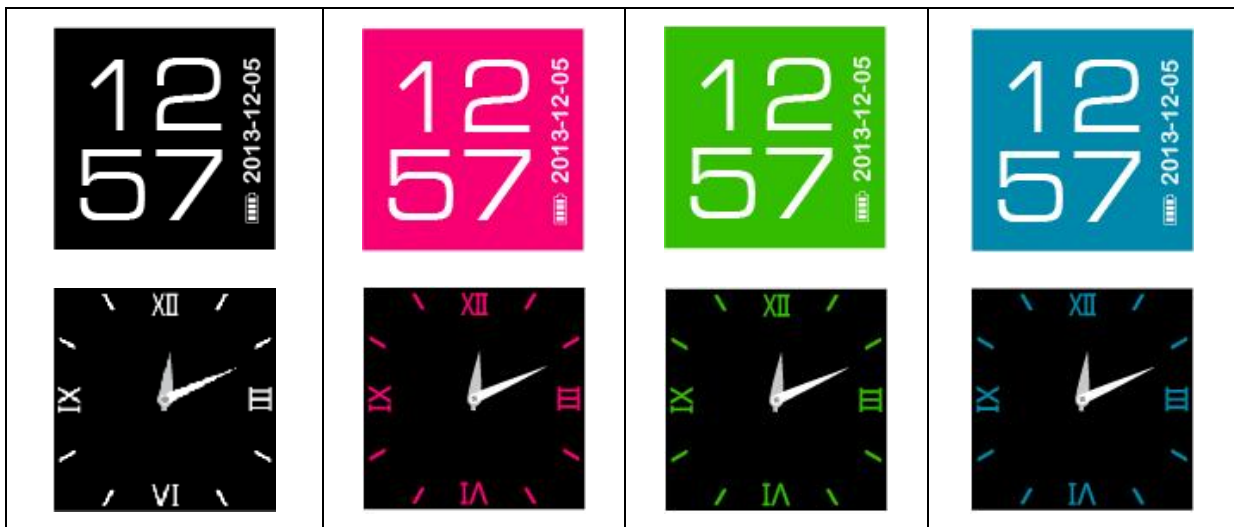



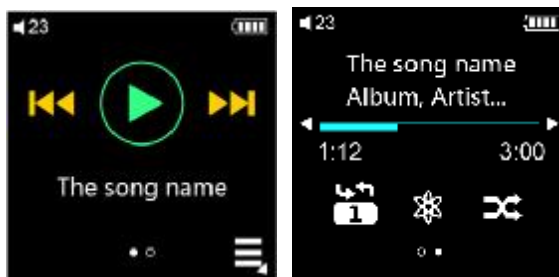

## 5.2 Music mode












### 5.2.1 Choose Player in the main menu and select Music



Swipe left to right to access the play options, which can also be found in Settings – Device – Repeat Mode or Play Mode

### 5.2.2 Function of icons


|                    |   |
|--------------------|---|
| Playlist           | Tap  to enter playlist<br>Tip: Long press to delete a song |
| Pause              | Tap    |
| Resume play        | Tap    |
| Play previous song | Tap    |

|                |   |
|----------------|---|
| Play next song | Tap   |
| Repeat/shuffle | Tap  Folder once  Folder repeat<br>Tap  All once  All repeat<br>Tap  Once  All repeat<br> : Repeat the current song/all songs in folder/all songs over and over<br> : Play the current song/all songs in folder/all songs once only<br> : Shuffle songs<br> : Play songs in turn |

### 5.2.3 Player

Enter Player menu to listen to music, FM radio, watch videos or browse pictures. All the pictures, music and videos can be found in Explorer. Once you have chosen a file, use the same functions as for music player mode.

You cannot access the Radio, Photo, Video and Explorer functions if the Smeezu smartwatch is connected to a BT smartphone. Please turn off the BT as per point 5.4 in the instruction manual.

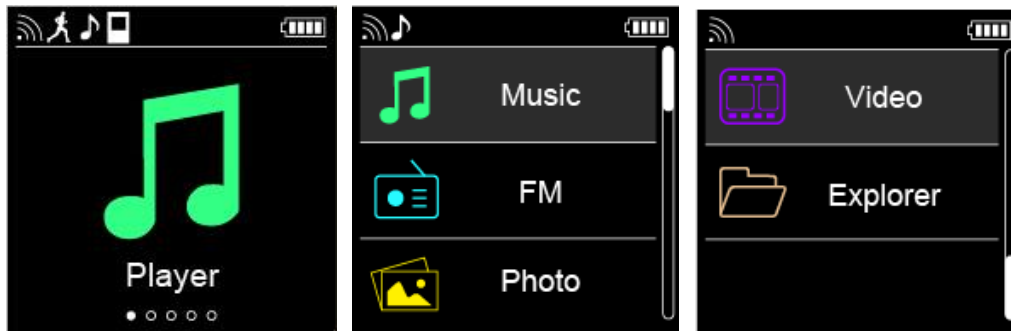

### 5.2.4 It is possible to modify the following functions via Settings - Device

|             |   |
|-------------|---|
| Repeat mode | Once / Repeat One / Folder Once / Folder Repeat / All Once / All Repeat |
|-------------|---|






## 5.3 BT (wireless technology 2.1)

### 5.3.1: Important remarks before pairing:





- This wireless device can operate up to a distance of 10 meters
- This device can pair two different BT devices (input & output) at the same time  
 Input device: smartphone  
 Output device: BT headphones or speaker
- To make sure both BT devices are successfully paired, you must pair the input device (smartphone) **FIRST** and then the output device (speaker or headphones)
- This device supports auto-record. It will automatically pair to the last device if the BT is on.





## 5.4 Pairing

### 5.4.1 Pairing with a smartphone

|  |   |  |
|--|---|--|
| <ul style="list-style-type: none"> <li>• Swipe to enter BT menu</li> </ul>                      | <ul style="list-style-type: none"> <li>• Tap screen to turn on BT</li> </ul>   | <ul style="list-style-type: none"> <li>• Turn on BT on your smartphone/BT device, it will be detected automatically</li> </ul>  |
| <ul style="list-style-type: none"> <li>• Pairing with the smartphone is successful</li> </ul>  | <ul style="list-style-type: none"> <li>• The BT icon is displayed in the top left corner in the main menu</li> </ul>  |  |

#### 5.4.2 Pairing with a BT device

|  |  |  |
|--|--|--|
| <ul style="list-style-type: none"> <li>• Swipe to enter BT menu</li> </ul>  | <ul style="list-style-type: none"> <li>• Tap screen to turn on BT</li> </ul>  | <ul style="list-style-type: none"> <li>• The Smartwatch will detect the BT device, press CONNECTING to make pairing</li> </ul>   |
|--|--|--|

|   |   |  |
|---|---|--|
| <ul style="list-style-type: none"> <li>• Pairing with the wireless device is successful</li> </ul>                           | <ul style="list-style-type: none"> <li>• BT icon is displayed in the main menu</li> </ul>  | <ul style="list-style-type: none"> <li>• If the pairing has failed, delete the connection and confirm this, then launch the new pairing</li> </ul>  |
| <ul style="list-style-type: none"> <li>• To disconnect the pairing, select the BT device name and disconnect it</li> </ul>  |   |  |

### 5.6 Call reminder

- This device is a phone partner. It informs you of an incoming call by vibration

|  |   |
|--|---|
| <ul style="list-style-type: none"> <li>• If this device is connected to an Android smartphone, the incoming phone numbers will be displayed</li> </ul>  | <ul style="list-style-type: none"> <li>• If this device is connected to an iOS (Apple) smartphone, incoming phone numbers will not be displayed</li> </ul>  |
|--|---|



## **5.7 Transferring music from the Smeezu watch to a BT device**

After the Smeezu watch has paired successfully with the BT device (speaker or headphones), you will be able to listen to music stored in the Smeezu watch internal memory via the BT speaker or headphones. Use the same buttons as explained in point 5.2 Music mode to control the music (play, stop, skip, etc.).



## **6. Sport**

This device measures time, steps, calculates distance, time and calories.

### **6.1 Set user profile**

Before first using the Sport function, go to Settings -> Sport – User Profile“ to set your user profile



#### **6.1.1 Set user's length of step when walking (Walk Step Size)**

Press the number you would like to modify so it is displayed in red, then swipe down to modify. For information, the average length is 80cm.



#### **6.1.2 Set user's length of step when running (Run Step Size)**

Press on the number you would like to modify so it is displayed in red, then swipe down to modify. For information, the average length is 100cm.



Note: Please enter correct data for step sizes before starting to walk/run. As each step size is slightly different, the result for the total distance will also be slightly different.

## **6.2 Walking & Running**

### **6.2.1 Quick GO:** for a quick start


Swipe right to left to show the different displays in Quick Go mode.



Note: The Sport function will not stop if you return to the main menu. If you swipe left to right to go back to a higher menu level, the Sport function will continue automatically.

### **6.2.2 Compete against yourself**

The goal to reach will be your best recorded time. You can choose from the highest calorie count, the maximum length of time or the longest distance (Best calories / Best time / Best distance)

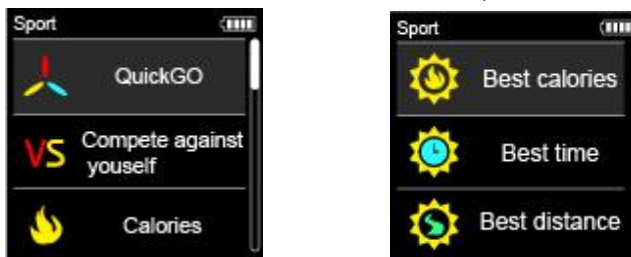

### **6.2.3 Calories/Time/Distance**

You can set a target by choosing Calories, Time or Distance. You will be notified automatically when the target is reached.

#### **Calories**




Press on Calories. Then press on the number you would like to modify so it is displayed in red, then swipe down to modify.

## Time



Press on Time. Then press on the number you would like to modify so it is displayed in red, then swipe down to modify.

## Distance

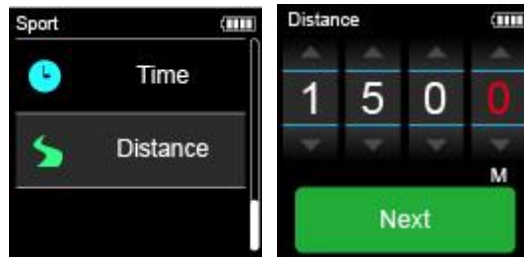

Press on Distance. Then press on the number you would like to modify so it is displayed in red, then swipe down to modify.


### 6.2.4 History

History can store 20 records. Long press a record to delete it.



### 6.2.5 Music

You can choose if you want to listen to music when walking or running (this function is not available in Quick GO mode)

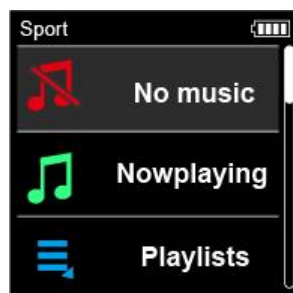

### 6.2.6 Checking results

To check the data once the exercise is finished, press Stop, confirm Yes and swipe left to right to display the different screens in the following order.



Calories burned are represented by the following foods:  
chocolate, ice cream, soft drinks



To check if the Target has been reached:



## 7. Stopwatch


Enter Stopwatch and select Start to begin the count



Press on Lap to record the number of laps and the time for each lap.  
Every tap on Lap adds one lap to the total lap number.  
Press on Stop to pause the stopwatch and tap Start again to resume it.  
Press Reset to clear the count.





If laps are recorded, tap  in the top right corner to display the list of all the recorded laps.



## **8. Settings**

Enter the Settings menu


Sport: To set user profile

Device: To set Repeat Mode, Play Mode, Display, Date and time, Language.



## **9. Connecting to a computer**

Connect the device to a PC via the USB cable to use it as a Removable Disk.

When the device is connected to the PC, press the  button to exit from Connect User Interface and return to the main menu.







## **10. Recharging the device**

Use the cable supplied to connect the Smartwatch to a USB power source and recharge the battery.

## **11. Video Conversion Tool**

This device supports AVI (128X128) video format files. The Video Conversion Tool supplied with the Digital Media Player can convert most video files into AVI (128X128) video format. The Video Conversion Tool can be found in a folder inside the Smartwatch, just connect the watch to the PC using the USB cable to access this.

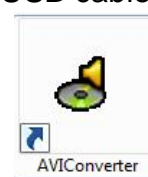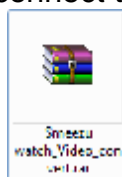

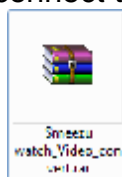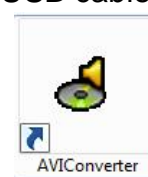
1. Unzip the file  to display the following icon:
2. Open the conversion tool 



2. Click on Add and select the video source, choose the target file path, name the file, then click on Save



3. Click on Convert Now. When the conversion is finished, search for the file using the target file path in your computer. Then save the file in the Smeezu watch to play it.

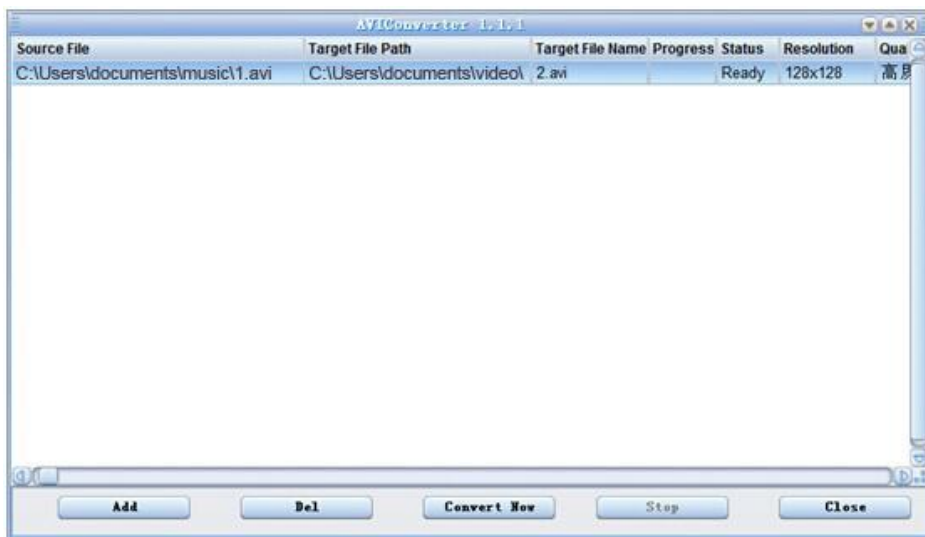

## 12. Trouble shooting

| Symptoms   | Trouble Shooting   |
|--|--|
| No power   | Check battery level.<br>Recharge the battery if required.  |
| Can't be connected with a BT device                  | Check the BT device is switched on   |
| Can't be connected with a mobile phone               | If the pairing has failed, delete the pairing and confirm, then create a new connection.             |
| Unable to play files                                 | Check the file is in a compatible format.<br>Convert the file into a compatible format if necessary. |
| Unable to locate files                               | Check the file is stored in the correct directory.   |
| No music is heard in the earphones                   | Check the volume level.  |
|  | Check the earphones are properly connected.  |
|  | Check the music file is compatible with the player.  |
| Not charging   | Check the USB cable is properly connected to the PC and to the Smartwatch                            |
| Unable to store music                                | Check there is enough space on your Smartwatch to download the music file.                           |
|  | Check the USB cable is properly connected to the PC and to the Smartwatch                            |
| Computer does not recognize the Digital Media Player | Check the USB cable is properly connected to the PC and to the Smartwatch                            |
|  | Check the USB cable is in good condition.  |

### TREATMENT OF END-OF-LIFE ELECTRICAL AND ELECTRONIC EQUIPMENT



#### For application in countries of the European Union and other countries in Europe with waste sorting systems

This symbol, on the product or its packaging, indicates that the product cannot be treated as household waste. Instead, it should be handed over to the appropriate collection point for the recycling of electrical and electronic equipment.

By ensuring that this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health. Recycling materials will help preserve natural resources. Please contact your town council, waste collection centre or distributor for all further information on recycling this product.